


# IMPASSA

---

## Self-Contained Wireless Alarm System

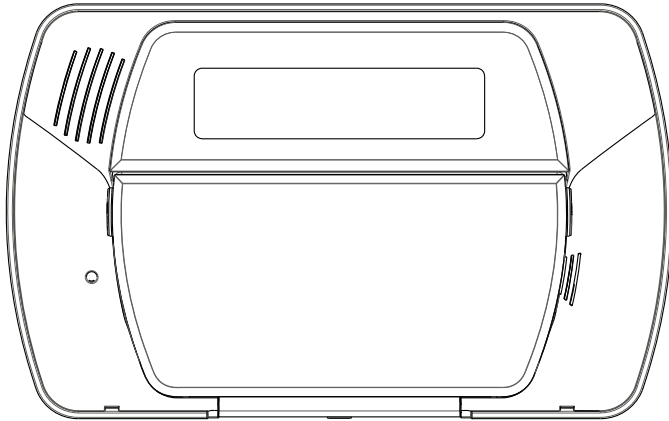

**v1.0 User Manual**

---

**WARNING:** This manual contains information on limitations regarding product use and function and information on the limitations as to liability of the manufacturer. The entire manual should be carefully read.



---

# Table of Contents

<b>1. About Your Security System</b>	<b>2</b>
1.1 Fire Detection (must be enabled by Installer)	2
1.2 Carbon Monoxide Detection (must be enabled by Installer)	2
1.3 Testing	2
1.4 Monitoring	2
1.5 Maintenance	2
1.6 General System Operation	2
<b>2. Keypad Controls &amp; Indicators</b>	<b>3</b>
<b>3. Language Selection</b>	<b>3</b>
<b>4. Arming and Disarming the System</b>	<b>3</b>
4.1 Stay Arming	3
4.2 Night Arming	4
4.3 Silent Exit Delay	4
4.4 Away Arming	4
4.5 Quick Exit	4
4.6 Siren Sounds After Away Arming	4
4.7 Disarming	4
4.8 Remote Arming and Disarming	5
<b>5. Emergency Keys</b>	<b>5</b>
<b>6. When Alarm Sounds</b>	<b>5</b>
6.1 Intrusion (Burglary) Alarm Continuous Siren	5
6.2 Fire Alarm Pulsed Siren	5
6.3 Carbon Monoxide Alarm (must be enabled by your installer)	5
<b>7. 2-Way/1-Way Audio Operation (SCW9057 only)</b>	<b>5</b>
<b>8. Time &amp; Date Programming and Temperature Display</b>	<b>6</b>
<b>9. Bypassing Zones</b>	<b>6</b>
9.1 Bypass Group	6
<b>10. Trouble Conditions</b>	<b>7</b>
<b>11. Alarm Memory</b>	<b>7</b>
<b>12. Door Chime</b>	<b>7</b>
<b>13. Access Code Programming</b>	<b>8</b>
13.1 Access Codes	8
13.2 User Code Attributes	8
13.3 Inherent Attributes (all codes except installer)	8
13.4 Zone Bypassing Attribute	9
13.5 Phone Access Attribute	9
13.6 Bell/Siren Squawk Attribute	9
13.7 Erasing an Access Code	9
<b>14. Proximity Tag Enrollment (PT4/PT8)</b>	<b>9</b>
<b>15. User Function Commands</b>	<b>10</b>
15.1 Changing Brightness/Contrast	10
15.2 Changing the Buzzer Level	11
15.3 Viewing the Event Buffer	11
<b>16. Changing SMS Phone Numbers</b>	<b>11</b>
<b>17. Late to Open</b>	<b>11</b>
<b>18. SMS (Short Message Service) Notification</b>	<b>12</b>
18.1 The SMS Notification Sequence	12
18.2 SMS Remote Access Connection Sequence	12
18.3 On-board LCD Display SMS Messages	13
<b>19. Two-Way Wireless Key (WT4989, WT8989)</b>	<b>13</b>
19.1 Function Keys	13
19.2 WT4989/WT8989 Status Display Icons	13
19.3 Buzzer	14
19.4 Keylock Mode	14
<b>20. Testing Your System</b>	<b>14</b>
20.1 Siren and Keypad Display Test	14
20.2 Walk Test	15
20.3 Allowing Computer Access to your System	15
<b>21. Reference Sheets</b>	<b>15</b>
21.1 Access Codes	16
21.2 Sensor / Zone Information	16
21.3 SMS Telephone Numbers	16
<b>22. Keypad Quick Guide</b>	<b>17</b>
<b>23. Guidelines for Locating Smoke &amp; CO Detectors</b>	<b>18</b>
<b>24. Household Fire Safety Audit</b>	<b>20</b>
<b>25. Fire Escape Planning</b>	<b>20</b>

# FCC COMPLIANCE STATEMENT

**CAUTION: Changes or modifications not expressly approved by Digital Security Controls could void your authority to use this equipment.**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult a dealer or experienced radio/television technician for help.

The user may find the following booklet prepared by the FCC useful: "How to Identify and Resolve Radio/Television Interference Problems". This booklet is available from the U.S. Government Printing Office, Washington D.C. 20402, Stock # 004-000-00345-4.

## IMPORTANT INFORMATION

This equipment complies with Part 68 of the FCC Rules and, if the product was approved July 23, 2001 or later, the requirements adopted by the ACTA. On the top side of this equipment is a label that contains, among other information, a product identifier. If requested, this number must be provided to the Telephone Company.

Product Identifier: US:F53AL01B9057  
USOC Jack: RJ-31X

## Telephone Connection Requirements

A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details.

## Ringer Equivalence Number (REN)

The REN is used to determine the number of devices that may be connected to a telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most but not all areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local Telephone Company. For products approved after July 23, 2001, the REN for this product is part of the product identifier that has the format US:AAAQ##TXXXX. The digits represented by ## are the REN without a decimal point (e.g., 03 is a REN of 0.3). For earlier products, the REN is separately shown on the label. REN = 0.1B

## Incidence of Harm

If this equipment (SCW9055/SCW9057) causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice is not practical, the Telephone Company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

## Changes in Telephone Company Equipment or Facilities

The Telephone Company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens the Telephone Company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.

## Equipment Maintenance Facility

If trouble is experienced with this equipment (SCW9055/SCW9057) for repair or warranty information, contact the facility indicated below. If the equipment is causing harm to the telephone network, the Telephone Company may request that


you disconnect the equipment until the problem is solved. This equipment is of a type that is not intended to be repaired by the end user.

DSC c/o APL Logistics 757 Douglas Hill Rd., Lithia Springs, GA 30122

## Additional Information

Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission or corporation commission for information.

Alarm dialling equipment must be able to seize the telephone line and place a call in an emergency situation. It must be able to do this even if other equipment (telephone, answering system, computer modem, etc.) already has the telephone line in use. To do so, alarm dialling equipment must be connected to a properly installed RJ-31X jack that is electrically in series with and ahead of all other equipment attached to the same telephone line. Proper installation is depicted in the figure below. If you have any questions concerning these instructions, you should consult your telephone company or a qualified installer about installing the RJ-31X jack and alarm dialling equipment for you.

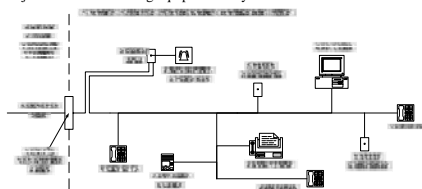

## INDUSTRY CANADA STATEMENT

**NOTICE: This product meets the applicable Industry Canada technical specifications.**

Le présent matériel est conforme aux spécifications techniques applicables d'Industrie Canada.

The Ringer Equivalence Number (REN) for this terminal equipment is 0.1.

L'indice d'équivalence de la sonnerie (IES) du présent matériel est de 0.1.

The Ringer Equivalence Number is an indication of the maximum number of devices allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the RENs of all the devices does not exceed five.

L'indice d'équivalence de la sonnerie (IES) sert à indiquer le nombre maximal de terminaux qui peuvent être raccordés à une interface téléphonique. La terminaison d'une interface peut consister en une combinaison quelconque de dispositifs, à la seule condition que la somme d'indices d'équivalence de la sonnerie de tous les dispositifs n'exécède pas 5.

The term 'IC:' before the radio certification number only signifies that Industry Canada technical specifications were met.

Certification Number IC: 160A-9057 (models SCW9055-433/SCW9057-433)

Certification Number IC: 160A-9057G (models SCW9055(D)(G)(SM)-433/

SCW9057(D)(G)(SM)-433)

This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

The SCW9055(X)-433 and SCW9057(X)-433 have been investigated by UL and

ULC and found in compliance with the listing requirements for Residential Fire

and Burglary applications in accordance with the following standards: UL985,

UL1023, UL1635, ULC-S545 and ORD-C1023.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil est conforme avec Industrie Canada exempts de licence standard RSS

(s). Le fonctionnement est soumis aux deux conditions suivantes: (1) cet appareil

ne peut pas provoquer d'interférences et (2) cet appareil doit accepter toute inter-

férence, y compris les interférences qui peuvent causer un mauvais fonctionnement

de l'appareil.

SCW9055-433, SCW9057-433, SCW9055G-433, SCW9057G-433, WT5500-433, WT5500P-433, WT4901, WT4911, WT4989 and PT4.

SCW9055-433, SCW9057-433, SCW9055G-433, SCW9057G-433, WT5500-433, WT5500P-433, WT4901, WT4911, WT4989 and PT4.

SCW9055-433, SCW9057-433, SCW9055G-433, SCW9057G-433, WT5500-433, WT5500P-433, WT4901, WT4911, WT4989 and PT4.

SCW9055-433, SCW9057-433, SCW9055G-433, SCW9057G-433, WT5500-433, WT5500P-433, WT4901, WT4911, WT4989 and PT4.

SCW9055-433, SCW9057-433, SCW9055G-433, SCW9057G-433, WT5500-433, WT5500P-433, WT4901, WT4911, WT4989 and PT4.

SCW9055-433, SCW9057-433, SCW9055G-433, SCW9057G-433, WT5500-433, WT5500P-433, WT4901, WT4911, WT4989 and PT4.

SCW9055-433, SCW9057-433, SCW9055G-433, SCW9057G-433, WT5500-433, WT5500P-433, WT4901, WT4911, WT4989 and PT4.

The 868 MHz models are not UL/ULC listed.

Only these models shall be used with UL/ULC listed systems: SCW9055-433, SCW9057-433, SCW9055G-433, SCW9057G-433, WT5500-433, WT5500P-433, WT4901, WT4911, WT4989 and PT4. Only certain models of SCW9055/57 include the SMS features, check with your installer.





Read this manual carefully and have your installer instruct you on your system's operation and on which features have been implemented in your system. All users of this system should be fully instructed in its use. Fill out the "System Information" page with all of your zone information and access codes, and store this manual in a safe place for future reference.

**Please consult your installer for further information regarding the false alarm reduction features built into your system, as not all are covered in this manual.**



This equipment is capable of monitoring fire detection devices such as smoke detectors and providing a warning if a fire condition is detected. Good fire detection depends on having an adequate number of detectors placed in appropriate locations. This equipment should be installed in accordance with NFPA 72 (N.F.P.A., Batterymarch Park, Quincy MA 02269). Please read the Family Escape Planning guidelines in this manual.



This equipment is capable of monitoring carbon monoxide detectors and providing a warning if carbon monoxide is detected. Please read the Family Escape Planning guidelines in this manual and instructions that are available with the carbon monoxide detector.



To ensure that your system continues to function as intended, you must test your system weekly. Please refer to the "Testing your System" section in this manual. If your system does not function properly, call your installing company for service.



This system is capable of transmitting alarms, troubles, and emergency information to a central station. If you initiate an alarm by mistake, immediately call the central station to prevent an unnecessary response.

**The monitoring function must be enabled by the installer before it can become functional.**

**Consult with your installer to determine if your system is configured with a communicator delay. A communicator delay will prevent a report to the central station if the control panel is disarmed within 30-45 seconds after an intrusion alarm is triggered. Note that fire-type alarms are normally reported without a delay.**

**Ensure that your installer verifies that your system is compatible with the Central Station Receiver format at yearly intervals.**



With normal use, the system requires minimum maintenance. Note the following points:

- Do not wash the security equipment with a wet cloth. Light dusting with a slightly moistened cloth should remove normal accumulations of dust.
- Replace the standby battery every 3-5 years.

**Do not attempt to replace the battery or open the enclosure; there is a risk of electric shock and/or fire.**

- For other system devices such as smoke detectors, motion detectors, glassbreak detectors or door/window contacts, consult the manufacturer's literature for testing and maintenance instructions.




Your security system comprises an integrated alarm control/keypad and various sensors and detectors. The keypad is mounted by the main entry/exit location. The system is self-contained; electronics and standby battery are housed within the keypad unit.

**Only the installer or service professional should have access to the system.**

The security system has several zones of area protection. Each of these zones communicates to a single wireless sensor (motion detectors, glassbreak detectors, door contacts, etc.) or to one or more hard-wired sensors. A sensor in alarm is indicated by messages on the LCD.

Additional features include Automatic Inhibit (Swinger Shutdown) for Alarm; Tamper and Trouble signals after 3 occurrences in a given set period; SMS interactive operation (SMS interactive operation is not available for all models); and a Programmable Keypad Lockout option.

For SIA CP-01 classified installations, the swinger shutdown feature is programmed such that one or two trips will shut down the zone. The zone will be restored after a manual reset (by entering the access code at the time of disarming the alarm system) or it will be reset automatically after 48 hours with no trips on any zones.

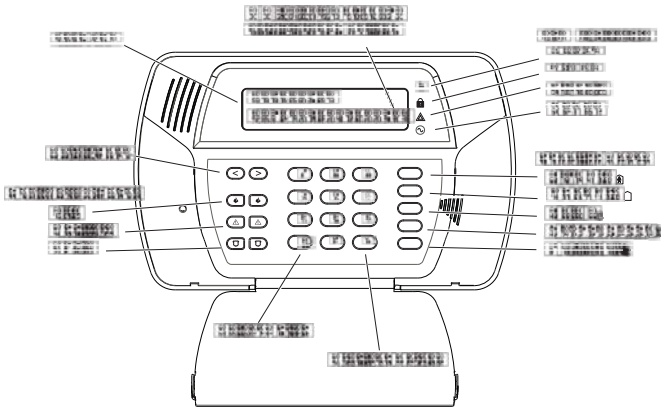

**IMPORTANT NOTICE**

A security system cannot prevent emergencies. It is only intended to alert you and your central station (if applicable) to an emergency situation. Security systems are generally very reliable but they may not work under all conditions and they are not a substitute for prudent security practices or life and property insurance. Your security system must be installed and serviced by qualified security professionals. These professionals can instruct you on the level of protection that has been provided and on system operations.

When the keypad is in Sleep Mode it is saving battery life e.g., backlighting, LCD message display will not be turned on until there is a specific reason: a key is pressed, entry delay is started. In this mode the keypad is still functioning and nothing will be visible; however if desired, your installer can enable the product to show the armed status while in Sleep Mode.



Your system can display messages in different languages.

1. Press and hold both buttons simultaneously for 2 seconds.
2. Using the buttons, scroll through the available languages.
3. Press to select your desired language.



Stay arming will bypass the interior protection (i.e., motion sensors) and arm the perimeter of the system (i.e., doors and windows). Close all sensors (i.e., stop motion and close doors). The Ready (✓) indicator will illuminate.

Press and hold the Stay button until it beeps (approx. 2 seconds). Enter your access code, do not leave the premises. During the setting state (Exit Delay active), the Armed (🔒) and Ready (✓) indicators will illuminate.

When the exit delay is completed, the alarm system is armed/set and this is indicated on the keypad as follows: the Ready (✓) indicator will turn off, the Armed (🔒) indicator will remain on.

The Armed (🔒) indicator and a bypass message will be displayed. The system will automatically ignore bypassed zones (i.e., motion sensors).

Your installer can program a function key on the keypad to allow you to arm the system in Stay mode instantly. This allows you to activate Stay Arming by holding down the function key for 2 seconds. The system arms immediately with no beeps sounding and no exit delay. This feature must not be used in CP-01 installations.

For SIA CP-01 listed panels, the Stay Arming Exit Delay will be twice as long as the Away Arming Exit Delay.

If your system is installed in accordance with SIA CP-01 Standard for False Alarm Reduction, then the security system will arm in the Stay Armed mode if the exit delay time expires and no exit has been made.



To night arm the system when it has been armed in Stay mode, press **[\*][1]** at the keypad. All interior zones will now be armed except for devices programmed as Night zones.

**[\*][\*][\*][\*]** Your installer can also program a function key on the keypad that allows you to arm the system in Night mode. This allows Night arming to be activated by holding down the function key for 2 seconds.

Night zones are only armed in Away mode; this permits limited movement within the premises when the system is fully armed. Ensure that your installer has provided you with a list identifying zones programmed as night zones. When the interior zones are activated (i.e., **[\*][1]**) you must enter your access code to disarm the system in order to gain access to interior areas that have not been programmed as night zones.



If the system is armed using the Stay button or using the “No Entry” Arming method (**[\*][9]** [Access Code]), the keypad buzzer will be silenced and the exit time will be doubled for that exit period only. (CP-01 only).



Close all sensors (i.e., stop motion and close doors). The Ready (✓) indicator should be on.

To arm, press and hold the Away button for 2 seconds and/or enter your access code or press **[\*][0]** to Quick Arm.

During the setting state (exit delay active) the Armed (🔒) and Ready (✓) indicators will turn on, and the keypad will sound one beep per second. You now have \_\_\_\_ seconds to leave the premises (please check with your installer to have this time programmed). A keypad buzzer, whose pulsating rate is distinct, will sound during the last ten seconds of the exit delay to warn person(s) that the exit delay is running out. To cancel the arming sequence, enter your access code.

When the exit delay is completed, the alarm system is armed and this is indicated on the keypad display as follows: the Ready (✓) indicator will turn off, the Armed (🔒) indicator will remain on and the keypad will stop sounding.

**[\*][\*][\*][\*]** The system can also be armed/disarmed with a wireless key and with prox tags. Refer to the “Proximity Tags” and “Two-Way Wireless Key” sections for more details.

**[\*][\*][\*][\*]** your system is installed in accordance with SIA CP-01 Standard for False Alarm Reduction, the following holds true: Violation and restoral, followed by a second violation of the entry/exit zone before the end of the exit delay, will restart the exit delay.



If the system is armed and you need to exit, use the Quick Exit function to avoid disarming and rearming the system. Press and hold the Quick Exit button (🚪) for 2 seconds or press **[\*][0]**. You now have 2 minutes to leave the premises. When the door is closed again, the remaining exit time is cancelled.



In order to reduce false alarms, the Audible Exit Fault is designed to notify you of an improper exit when arming the system. If you fail to securely close the entry/exit door during the programmed exit delay period, the system will sound the alarm to indicate an improper exit (your installer will tell you if this feature has been enabled on your system). If this occurs:

1. Re-enter the premises.
2. Enter your access code before the entry delay timer expires, to disarm the system.
3. Repeat the Away arming procedure, ensuring that the entry/exit door(s) are secured.



An error tone will sound if the system is unable to arm. This will happen if the system is not ready to arm (i.e., sensors are open), or if an incorrect user code has been entered. If this happens, ensure all sensors are secure, press **[\*]** and try again.



To disarm an armed system (Armed (🔒) indicator is On), enter your access code. If your keypad is in Sleep mode, press any key to wake it up then enter your access code. The keypad will sound a continuous tone after the entry delay has been initiated by opening the entry/exit door. Enter your code within \_\_\_\_ seconds to avoid an alarm condition (check with your installer to program this time).





If your code is invalid, the system will not disarm and a 2-second error tone will sound. If this happens, press [1] and try again.



The system can be armed and/or disarmed, if programmed by the installer, using a remote control device (wireless key). When arming the system using the Arm button on a wireless key, the system will acknowledge the command by sounding a single bell/siren squawk, if programmed to do so by the installer. When disarming using the Disarm button on a wireless key, the system will acknowledge the command by sounding two bell/siren squawks. Three squawks, when disarming with the Disarm button, indicates that an alarm occurred while the system was armed. If you are unsure of the cause of the alarm, proceed with caution (see section on 2-way Wireless Keys).



Press BOTH [2] [3] (Fire), [4] [5] (Auxiliary), or [6] [7] (Panic) buttons for 2 seconds to generate a Fire, Auxiliary, or Panic alarm. The keypad buzzer will beep indicating that the alarm input has been accepted and transmission to the central station is underway. The Fire buttons may or may not sound the siren depending on installer setup.

The Fire buttons can be disabled by the installer.

The Auxiliary Alarm buttons are not intended to be used for medical signals.



The system can generate 3 different alarm sounds:

- Continuous Siren = Intrusion/Burglary Alarm
- Temporal / Pulsed Siren = Fire Alarm
- 4 beeps, 5-second pause, 4 beeps = Carbon Monoxide alarm

The priority of signals is fire alarm, carbon monoxide alarm then burglary alarm.



If the alarm was accidental, enter your access code to silence the alarm. If the alarm system is disarmed within the programmed Abort Window (check with the installer if this option has been enabled on your system and what is the transmitter delay time programmed), no alarm transmission to the Central Station will occur. Following the Abort Window there appears a 5-minute Cancel Window, during which a user can cancel, by entering their access code, an alarm that has been previously transmitted. A cancel signal will be transmitted to the central station and the alarm system will also announce that the cancel signal was transmitted. Call your central station to avoid a dispatch.



**⚠ Follow your emergency evacuation plan immediately!**

If the fire alarm was accidental (burned toast, bathroom steam, etc.), enter your access code to silence the alarm. Call your central station to avoid a dispatch.



Activation of your CO alarm indicates the presence of carbon monoxide (CO), which can be fatal. During an alarm, the red LED on the CO detector flashes rapidly and buzzer sounds with a repeating cadence of: 4 quick beeps, 5-second pause, 4 quick beeps. If an alarm sounds:

1. Operate silence button.
2. Call emergency services or your fire department.
3. Immediately move outdoors or to an open door/window.

**WARNING: Carefully review your Carbon Monoxide Installation/User Guide to determine the necessary actions required to ensure your safety and ensure that the equipment is operating correctly. Incorporate the steps outlined in the guide into your evacuation plan.**

## 7. 2-Way/1-Way Audio Operation (SCW9057 only)

If programmed by the installer, this feature allows the monitoring station to initiate a 2-way audio (talk/listen) or 1-way audio (listen-in only) session when an alarm has been received. This feature is used to verify the nature of the alarm or determine the type of assistance required by the occupant.

This feature can be initiated only by the monitoring station after an alarm has been received. The user can not initiate a 2-way audio session.



Press [6] then enter your master access code to enter User Functions. Use the [4] buttons to find the menu option, then press [2] to select. Enter the time in 24-hr. format (HH:MM), followed by the date (MM:DD:YY).



Press [#] to exit programming. If you are viewing a “Loss of Clock” trouble from within the trouble menu ([2]), press [2] to directly enter Date and Time programming (see Trouble Conditions).

Your installer may have programmed your system to display the time and date while the keypad is idle. Press the [#] button to temporarily clear the date and time display if desired.

The SCW9055/9057 clock display can be automatically programmed if a 3G Communicator is connected. This feature must be enabled by your installer.

The SCW9055/9057 system and WT5500 keypad can also display the outdoor temperature (Fahrenheit or Celsius) from the 2-way outdoor siren. This feature must be enabled by your installer.



Use the zone bypassing feature when you need access to a protected area while the system is armed, or when a zone is temporarily out of service but you need to arm the system. Bypassed zones will not be able to sound an alarm. As a result, bypassing zones reduces the level of security. If you are bypassing a zone because it is not working, call a service technician immediately so that the problem can be resolved and your system returned to proper working order. Ensure that no zones are unintentionally bypassed when arming your system. Zones cannot be bypassed once the system is armed. Bypassed zones (except for 24-hr zones) are automatically cancelled each time the system is disarmed and must be bypassed again, if required, before the next arming.

With the system disarmed:

1. Press [2] to enter the function menu. The keypad will display the screen on the right.
2. Press [1] or [4].
3. If your system is programmed to require access codes the screen on the right will be displayed. Enter your 4-digit access code.
4. Scroll to the desired zone number using the [4] keys, then press [2] to select the zone or directly enter the 2-digit number of the zone you wish to bypass (e.g., 0 5 for zone 5).



To remove bypass (all zones):

1. Press [1], then your access code.
2. Press [0][0].
3. To exit bypassing mode and return to the Ready state, press [#].



To recall the last set of bypassed zones:

1. Press [1], then your access code.
2. Press [9][9].
3. To exit bypassing mode and return to the Ready state, press [#].



A Bypass Group is a selection of zones programmed into the system. If you bypass a group of zones on a regular basis, you can program them into a Bypass Group, so that you do not have to bypass each zone individually. Note that only one Bypass Group can be programmed at a time.



1. Press [1], then enter your access code.
2. Enter the 2-digit numbers (01-34) of the zones to be included in the Bypass Group or use the [<][>] buttons to find the zone to be included in the Bypass Group, then press [2] to select the zone.
3. To save the selected zone into the group, press [9][5].
4. To exit bypassing mode and return to the Ready state, press [#].

**When an access code is required to enter bypassing, only the master code and codes with Supervisory enabled can set the Bypass Group.**

**When an access code is required to enter bypassing, only the master code and codes with Supervisory enabled can set the Bypass Group.**

1. Press [0][1], then your access code.
2. Press [9][1]. The next time the system is armed, the zones in this group will be bypassed.
3. To exit bypassing mode and return to the Ready state, press [#].

**The Bypass Group is only recalled if the system is armed/disarmed after programming the Bypass Group.**

**This feature is not to be used in UL Listed installations.**

**This feature is not to be used in UL Listed installations.**

When a trouble condition is detected, the Trouble (Δ) indicator will turn on and the keypad will beep every 10 seconds. Press the [#] button to silence the beeps. Press [0][2] to view the trouble condition. The Trouble (Δ) indicator will flash. Use the scroll [←][→] keys to view troubles.

Message	Message Description	Action
Alternate Communicator Trouble	Indicates SIM Card Lock, 3G Network Trouble, Ethernet Trouble, Central Station Receiver Trouble, Supervision Trouble, and SMS Config Trouble. Press [←][→] to scroll through individual troubles.	Call for service. For Ethernet Trouble check LAN connections.
Service Required (Press [1] for more information)	Indicates Low Battery, System Trouble, System Tamper or RF Jam detected.	Call for service.
Loss of AC Power	If the building and/or neighbourhood has lost electrical power, the system will continue to operate on battery power for several hours.	Check AC connection. Call for service.
Telephone Line Fault	The system has detected that the telephone line is disconnected.	Call for service.
Failure to Communicate	The system attempted to communicate with the monitoring station but failed. This may be due to a telephone line Fault.	Call for service.
Module/Sensor Fault	The system is experiencing difficulties with one or more module/sensor on the system. Continue to press [0][0] to navigate through the zone, keypad, and siren fault menus.	Call for service.
Module/Sensor Tamper	The system has detected a tamper condition with one or more module/sensor on the system. Continue to press [6] to navigate through the zone, keypad, and siren tamper menus.	Call for service.
Module/Sensor Low Battery	The system has detected a low battery condition with one or more module/sensor on the system. Continue to press [7] to display the zone(s), wireless key(s), keypad(s), siren(s) and prox tag(s).	See section on Siren Test. Call for service.
Loss of Time & Date	If complete power was lost (AC and Battery), the time and date will need to be re-programmed. Press [0][0].	Reprogram Time & Date.
Blank Display/No Response	Keypad battery may have discharged beyond the usable level.	Replace battery (call for service if trouble not cleared).
"Panel Response Not Received" message	The keypad has lost wireless communication with the panel. Occasional display of this message may be caused by local radio frequency interference.	If trouble persists, call for service.

**When an alarm occurs, the Alarm Memory message will be displayed. To view which sensor(s) generated the alarm, press [0][3]. For the system keypad use the scroll [←][→] buttons to view the sensors in alarm memory. Press [#] to exit. To clear the memory, arm and disarm the system.**

When an alarm occurs, the Alarm Memory message will be displayed. To view which sensor(s) generated the alarm, press [0][3]. For the system keypad use the scroll [←][→] buttons to view the sensors in alarm memory. Press [#] to exit. To clear the memory, arm and disarm the system.

If an alarm sounded while armed, the system will automatically go to alarm memory when you disarm the system. In this instance, you should proceed with caution, as the intruder may still be within the building/premises.

**To turn the door chime function on or off, press and hold the Chime (Ⓜ) button for 2 seconds or press [0][4]. The system will sound 3 beeps to indicate the door chime is on, or one long tone to indicate that door chime is off.**

To turn the door chime function on or off, press and hold the Chime (Ⓜ) button for 2 seconds or press [0][4]. The system will sound 3 beeps to indicate the door chime is on, or one long tone to indicate that door chime is off.



Next, scroll [←][>] to the attribute you want to program and press [↵] (or enter the attribute #) to enable/disable the attribute. [66]

#	Attribute	#	Attribute
1	Supervisor Code	5-6	For Future Use
2	Duress Code	7	Bell/Siren Squawk upon Away Arming/Disarming
3	Zone Bypassing Enabled	8	One-Time Use Code
4	Phone Access		



This attribute allows the user to manually bypass zones if bypassing requires an access code.



This attribute allows the user to specify which user access codes can be used for remote access via SMS.



This attribute is used to determine whether an access code should generate an arming/disarming squawk when the away function key is pressed on a wireless key. Contact your installer to have this programmed. The Master code cannot use the Bell/Siren Squawk attribute, but the code is required to enable the Bell/Siren for other codes.

**This feature cannot prevent the Arm/Disarming squawks from being generated if an access code assigned to a wireless key is manually entered at a keypad.**



To erase a code, select the code and enter [0] as the first digit. If [0] is entered, the system will delete the code (including the associated prox tag) immediately and the user will be returned to select another code.



Proximity (prox) tag readers are only available on WT5500P keypads. Refer to the label on top of the keypad to confirm which model you have.



1. Enter [0][5][Master Code] to enter User Code Programming.
2. Scroll to the desired user code (01-16, or 40 for the master code) then press [↵].
3. Enter your desired 4 or 6-digit user access code. The following message will be displayed after the user access code is entered:



4. Place the prox tag near the tag reader (Ⓢ) at the left side of the display to assign it to the user code. The following message will be displayed:



5. If an attempt is made to assign a prox tag to an existing user code that has an associated prox tag, the following message will be displayed.



Select another user code or erase the existing user code and associated prox tag and re-enroll with the new prox tag. Return to Step 2 for instructions on how to enroll a user code.

**To exit the process at anytime, press [#].**



Enter [0][5][Master Code], select the desired user code. Enter [0] to erase the code and associated prox tag. The keypad will display the user number (e.g., 01) with a letter "P" if a user code has already been programmed and a letter "T" if a code and prox tag have been programmed.

User 40 for the master code cannot be deleted; an attempt to delete this user code will delete the prox tag only. The prox tag must be re-enrolled before it can be used again.



6. Place the prox tag near the tag reader (Ⓢ) at the left side of the display to arm/disarm your system. When arming the system, the following message will be displayed:



7. When disarming the system, the following message will be displayed:



8. If there is an attempt to swipe a prox tag that has not been enrolled, an error tone will sound and the following message will be displayed:



Return to Step1 for instructions on how to enroll the prox tag.

**WARNING: KEEP THE PROXIMITY TAG OUT OF REACH OF SMALL CHILDREN.**

**THE MATERIALS ASSOCIATED WITH THIS PRODUCT (LITHIUM BATTERIES, ETC.) MUST BE RECYCLED ACCORDING TO LOCAL RULES AND REGULATIONS.**



Disarm the system then enter [\*][6][Master Code]. The [\*][6] command is used to gain access to the following list of Master functions of the system:

[\*][6][00-23] Enter 4 digits for 24hr System Time (HH-MM). Valid entries are 00-23 for the hour and 00-59 for minutes. Enter 6 digits for the Month, Day and Year (MM-DD-YY).

[\*][6][00-59] For Future Use.

[\*][6][00-01] The system tests siren output: on-board siren – 4 seconds (2 seconds medium volume, 2 seconds high volume), indoor/outdoor siren – 2 seconds. Keypad lights, back-up battery pack and communicator are tested.

[\*][6][00-01] If enabled, the installer can to access Installer Programming remotely using DLS (Downloading Software). This function provides a window for telephone ring detection by the alarm system. The DLS window will remain open for 6 hours, during which time the installer will be able to enter DLS an unlimited number of times. After the 6-hr window has expired, access to programming via DLS will be unavailable until the window is re-opened.

[\*][6][00-01] If enabled by the installer, the panel will make 1 attempt to call the downloading computer. The downloading computer must be waiting for the panel to call before downloading can be performed.



[\*][6][00-01] Allows the user to enter the Walk Test mode. See Walk Test on page 15.

[\*][6][00-01] This function enables or disables the Late to Open time programmed in [0].

[\*][6][00-01] This function is used to program the time setting enabled in [9].

[\*][6][00-01] Refer to “Late to Open” section for details.



When this option is selected, the keypad will allow you to scroll through 4 brightness levels and 10 contrast levels.

1. Press [\*][6] [Master Code].
2. Use the [←][→] buttons to scroll to either Brightness Control or Contrast Control.
3. Press [↵] to select the setting you want to adjust.
4. a) [Brightness Control] There are 4 backlighting levels. Use the [←][→] buttons to scroll to the desired level.  
b) [Contrast Control] There are 10 different display contrast levels. Use the [←][→] buttons to scroll to the desired contrast level.
5. To exit, press [↵].



When this option is selected, the keypad will allow you to scroll through 21 different buzzer levels. A level of 00 disables the buzzer.

1. Press [6] [Master Code].
2. Use the [Left/Right] buttons to scroll to Buzzer Control, then press [Enter] to select.
3. There are 21 levels; use the [Left/Right] buttons to scroll to the desired level. Press [#] to exit.



The event buffer will show you a list of the last 500 events that have occurred on your system.

1. Press [6] [Master Code].
2. To select Event Buffer viewing, press [Enter].
3. The keypad will display the event number and the time and date. Press [Enter] to switch between this information and the event details.
4. Use the [Left/Right] buttons to scroll through the events in the buffer.
5. To exit event buffer viewing, press [#].




This section tells you how to program your SMS phone numbers:

1. Enter [6] [Master Code] to enter the Master User Functions of the system.
2. Use the [Left/Right] buttons to scroll to the SMS programming prompt.




3. Press [Enter] to select the SMS phone numbers or to see your panel's cellular phone number. The following message is displayed:

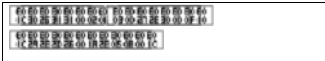

"P" denotes whether the phone number has been programmed.

- 

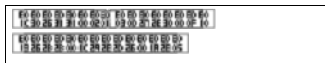


Pressing [Enter] here shows your panel's cellular telephone number.

4. Press [Enter] to select Phone No. 1. The following 26-digit phone number screen is shown.




X=1 to 8 to indicate the phone number screen being programmed. (e.g., X=1 for Phone No. 1)

5. Program a new phone number or delete an existing phone number as follows:

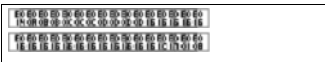

Do not delete the remaining F's.

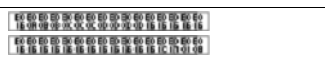

6. Use the [Left/Right] buttons to scroll to another telephone number to be programmed.
7. Repeat from Step 4 to enter more phone numbers. To exit the process at anytime, press [#].



This feature allows a user to be notified if their alarm system is not disarmed by a programmed time of day.

The Late-to-Open feature requires the monitoring station to forward calls to the user. Verify with the installer whether this function is active.











Provides an audible confirmation of a pressed button or that a command to the panel has been executed.



Ensures that the system is not accidentally armed or disarmed by the wireless key.



1. Press and hold the Status **i** and Away **🏠** keys simultaneously for 3 seconds.
2. After 3 seconds, the wireless key will beep and flash the keylock icon (**🔒**) to indicate that the keys are locked.



1. Press and hold the Status **i** and Away **🏠** keys simultaneously for 3 seconds.

**Pressing the Panic **🚨** key for 3 seconds will also exit Keylock mode.**

2. Upon exiting Keylock mode, the status will be automatically displayed.



**Inform your Monitoring Station when you begin and end system testing.**

Household fire alarm systems shall be tested by a qualified service technician at least every 3 years in accordance with NFPA72. It is the user's responsibility to test the system weekly (excluding smoke detectors). Ensure you follow all the steps in the two tests below.

**Should the system fail to function properly, call your installer immediately for service.**



The test activates all display pixels and indicator lights on the keypad and does a 4-second check of the siren.


1. Press **[\*][6][Master Code][4]**. The following will occur:
  - The system activates the siren output for 2 seconds followed by full volume alarm for 2 seconds. All display lights and LCD pixels will turn on.
  - The Ready, Armed, Trouble and Power LED's will flash for the duration of the test.
2. To exit the function menu, press **[#]**.



The flashing trouble icon **⚠** on a keypad will indicate that keypad has a low battery.



1. Slide the keypad up and out from the mounting plate/desk stand (removing the screws first if required). The bay for the four AA batteries is open and visible at the back of the keypad.
2. Insert the batteries as directed on the back of the keypad. Ensure the correct polarity is observed.
3. Slide the keypad back onto the mounting plate / desk stand.

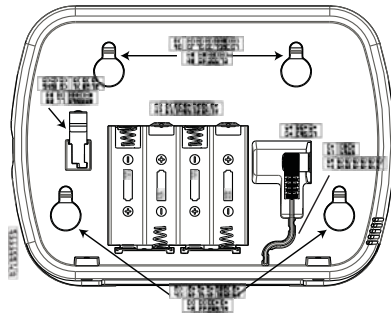

To determine which siren has a low battery press and hold the test button, located at the front of the siren, for 5 seconds.

- If the siren sounds for 4 seconds, the batteries are good.
- If the siren doesn't sound, the batteries are low.



- Open the front cover and remove old batteries. Once the old batteries are removed, wait 30 seconds before inserting the replacement batteries.
- Install new batteries as shown in the polarity indicated by the engraving. If the batteries are installed incorrectly, in the reverse polarity, the indoor siren will not work. With typical use, the WT4901/WT8901 batteries should be replaced every 2 years.

**Only use Energizer (4) 1.5V AA alkaline batteries (WT5500, WT4901/WT8901).**

**DO NOT RECHARGE THESE BATTERIES. DISPOSAL OF USED BATTERIES MUST BE MADE IN ACCORDANCE WITH THE WASTE RECOVERY AND RECYCLING REGULATIONS IN YOUR AREA.**



Walk Test mode allows you to test the operation of each detector in the system. While in Walk Test mode, the Ready, Armed, and Trouble LED's will flash to indicate that the Walk Test is active. The Walk Test can be terminated at anytime by re-entering [1][6] [Master Code][8] on the keypad. The system will also automatically terminate the Walk Test on completion; it will sound an audible warning (5 beeps every 10 seconds), beginning 5 minutes before the termination of the test.

1. Before testing, ensure that the system is disarmed and the Ready light is on.
2. Press [#] and close all zones to return the system to the Ready state.
3. Perform a System Test by following the steps in the previous section.
4. Press [1][6][Master Code][8] to initiate the Walk Test.
5. To test the zones, activate each detector in turn (e.g., open each door/window or walk in motion detector areas). The System will display the following message "Secure System Before Arming < >" , or "Secure or Arm System" when each zone (detector) is activated. Use the [<][>] buttons to view which zones are open. The message will disappear when the zones are closed.



Occasionally, your installer may need to send information to or retrieve information from your security system. Your installer will do this by having a computer call your system. You may need to prepare your system to receive this downloading call.

To do this: Press [1][6][Master Code][5] at the keypad. This allows downloading for a limited period of time. During this time, the system will answer incoming downloading calls. For more information on this feature, please ask your installer.



Fill out the following information for future reference and store this guide in a safe place.



FIRE      AUXILIARY      PANIC



The Exit Delay Time is \_\_\_\_\_ seconds.



The Entry Delay Time is \_\_\_\_\_ seconds.

For Service

**Central Station Information:**

Account#: \_\_\_\_\_ Telephone#: \_\_\_\_\_

**Installer Information:**

Company: \_\_\_\_\_ Telephone#: \_\_\_\_\_



**Battery Installation / Service Dates:**

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_





The following table summarizes the keys, indicators, and most often used commands of the keypad.



	Must be on to arm system. All zones must be secured or bypassed and the system disarmed for this light to activate.	
	Indicates system is armed. If the Ready light and the Armed light are both on it indicates an Exit Delay is in progress.	
	On indicates a system malfunction or tamper. Flashing indicates that the keypad has a low battery condition. Follow the instructions displayed or enter [2] to view trouble. The Trouble light will turn off when the trouble is corrected.	
	Indicates AC Power is present. The AC Power light will turn off when AC is absent.	
	[1]	Arms the system in Stay Mode.
	[2]	Arms the system in Away Mode (default).
	[3]	Same as pressing [1] on the keypad.
	[4]	Same as pressing [4] on the keypad.
	[0]	Same as pressing [0] on the keypad.
	Language Selection - Press and hold both buttons simultaneously for 2 seconds to activate. Scroll to the desired language. Press [0] to select choice.	
	Press and hold both buttons for 2 seconds to activate.	These keys must be programmed by the installer to function.
	Press and hold both buttons for 2 seconds to activate.	
	Press and hold both buttons for 2 seconds to activate.	
Press [0] to select. Press [0] to scroll. Press [0] exit.		
	[1]	Bypass Zones
	Press [0][0]	Clear Bypass
	Press [9][9]	Bypass Recall
	Press [9][5]	Save Bypass
	Press [9][1]	Recall Save
	[2]	View System Troubles
		Scroll to view all troubles
	[3]	View Alarms in Memory
		Scroll to view alarms
	[4]	Chime ON/OFF
		Turn chime on and off



6	Program User Codes Change Attributes	Press [ < ] > ] buttons to scroll to user code. Enter [Master Code]9][xx] to enter the user code (xx = 1-16). [1] Supervisor's Code [2] Duress Code [3] Zone Bypassing [4] Remote Access [5]-[6] Future Use [7] Bell/Siren Squawk Output [8] One Time Use Code
6	User Options < >	Event Buffer System Test Time and Date System Service/DLS User Call-up Walk Test Brightness Control Buzzer Level Control SMS Phone Numbers Contrast Control Late to Open
7	PGM Commands	If programmed by the installer, can be used to activate events such as opening/closing garage doors.
8	Installer Programming	Requires a special code.
9	No-Entry Arming	The system will arm in Stay mode after the exit delay expires, the entry delay is disabled.
0	Quick Arm/Quick Exit	Quick Arm is equivalent to entering your user code. Quick Exit allows you to exit the premises without disarming the system.



The following information is for general guidance only and it is recommended that local fire codes and regulations be consulted when locating and installing smoke alarms and CO Alarms:



Research has shown that all hostile fires in homes generate smoke to a greater or lesser extent. Experiments with typical fires in homes indicate that detectable quantities of smoke precede detectable levels of heat in most cases. For these reasons, smoke alarms should be installed outside of each sleeping area and on each storey of the home.

The following information is for general guidance only and it is recommended that local fire codes and regulations be consulted when locating and installing smoke alarms.



It is recommended that additional smoke alarms beyond those required for minimum protection be installed. Additional areas that should be protected include: the basement; bedrooms, especially where smokers sleep; dining rooms; furnace and utility rooms; and any hallways not protected by the required units.

On smooth ceilings, detectors may be spaced 9.1m (30 feet) apart as a guide. Other spacing may be required depending on ceiling height, air movement, the presence of joists, uninsulated ceilings, etc. Consult National Fire Alarm Code NFPA 72, CAN/ULC-S553-02 or other appropriate national standards for installation recommendations.

- Do not locate smoke detectors at the top of peaked or gabled ceilings; the dead air space in these locations may prevent the unit from detecting smoke.
- Avoid areas with turbulent air flow, such as near doors, fans or windows. Rapid air movement around the detector may prevent smoke from entering the unit.
- Do not locate detectors in areas of high humidity.
- Do not locate detectors in areas where the temperature rises above 38°C (100°F) or falls below 5°C (41°F).

Smoke detectors should always be installed in USA in accordance with Chapter 11 of NFPA 72, the National Fire Alarm Code: 11.5.1.1 Where required by applicable laws, codes, or standards for a specific type of occupancy, approved single- and multiple-station smoke alarms shall be installed as follows:


- (2) Outside of each separate dwelling unit sleeping area, within 6.4 m (21 ft) of any door to a sleeping room, the distance measured along a path of travel.
- (3) On every level of a dwelling unit, including basements.
- (4) On every level of a residential board and care occupancy (small facility), including basements and excluding crawl spaces and unfinished attics.
- (5) In the living area(s) of a guest suite.

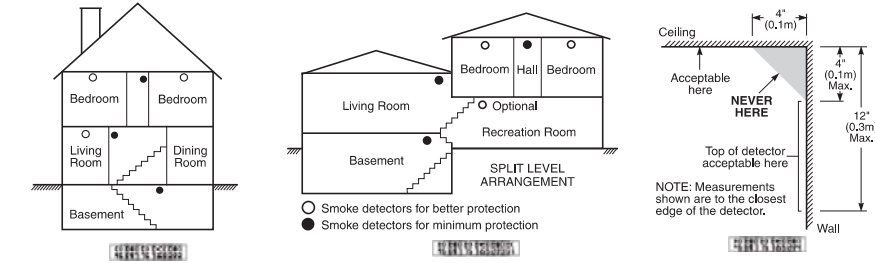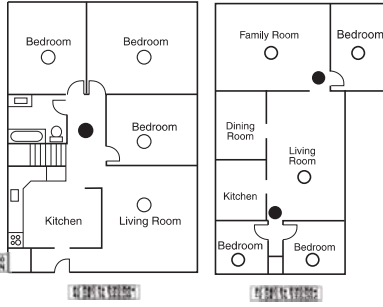

Carbon monoxide is colorless, odorless, tasteless, and very toxic. Carbon monoxide gas moves freely in the air. The human body is most vulnerable to the effects of CO gas during sleeping hours. For maximum protection, a CO alarm should be located outside primary sleeping areas or on each level of your home. Figure 5 indicates the suggested locations in the home. The electronic sensor detects carbon monoxide, measures the concentration and sounds a loud alarm before a potentially harmful level is reached.

Do place the CO alarm in the following areas:

1. In each sleeping area.
2. In each level of the home, including basements.
3. In each level of the home, including basements, except in sleeping areas.
4. In each level of the home, including basements, except in sleeping areas, if the alarm is not in a sleeping area.
5. In each level of the home, including basements, except in sleeping areas, if the alarm is not in a sleeping area.
6. In each level of the home, including basements, except in sleeping areas, if the alarm is not in a sleeping area.
7. In each level of the home, including basements, except in sleeping areas, if the alarm is not in a sleeping area.

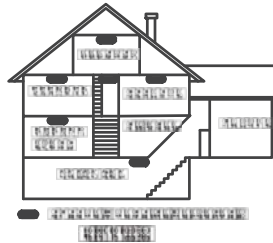

**PLEASE REFER TO THE CO DETECTOR INSTALLATION AND OPERATING INSTRUCTION SHEET FOR SAFETY INSTRUCTIONS AND EMERGENCY INFORMATION.**



Read this section carefully for important information about fire safety.

Most fires occur in the home. To minimize this danger, we recommend that a household fire safety audit be conducted and a fire escape plan be developed.

1. Are all electrical appliances and outlets in a safe condition? Check for frayed cords, overloaded lighting circuits, etc. If you are uncertain about the condition of your electrical appliances or household service, have a professional evaluate these units.
2. Are all flammable liquids stored safely in closed containers in a well-ventilated cool area? Cleaning with flammable liquids should be avoided.
3. Are fire-hazardous materials (e.g., matches) well out of reach of children?
4. Are furnaces and wood-burning appliances properly installed, clean and in good working order? Have a professional evaluate these appliances.



There is often very little time between the detection of a fire and the time it becomes deadly. It is thus very important that a family escape plan be developed and rehearsed.

1. Every family member should participate in developing the escape plan.
2. Study the possible escape routes from each location within the house. Since many fires occur at night, special attention should be given to the escape routes from sleeping quarters.
3. Escape from a bedroom must be possible without opening the interior door.

**Remember:** Consider the following when making your escape plans:

- Make sure that all border doors and windows are easily opened. Ensure that they are not painted shut, and that their locking mechanisms operate smoothly.
- If opening or using the exit is too difficult for children, the elderly or handicapped, plans for rescue should be developed. This includes making sure that those who are to perform the rescue can promptly hear the fire warning signal.
- If the exit is above the ground level, an approved fire ladder or rope should be provided as well as training in its use.
- Exits on the ground level should be kept clear. Be sure to remove snow from exterior patio doors in winter; outdoor furniture or equipment should not block exits.
- Each person should know of a predetermined assembly point where everyone can be accounted for (e.g. across the street or at a neighbor's house). Once everyone is out of the building, call the Fire Department.
- A good plan emphasizes quick escape. Do not investigate or attempt to fight the fire, and do not gather belongings as this can waste valuable time. Once outside, do not re-enter the house. Wait for the fire department.
- Write the fire escape plan down and rehearse it frequently so that should an emergency arise, everyone will know what to do. Revise the plan as conditions change, such as the number of people in the home, or if there are changes to the building's construction.
- Make sure your fire warning system is operational by conducting weekly tests. If you are unsure about system operation, contact your installer.
- We recommend that you contact your local fire department and request further information on fire safety and escape planning. If available, have your local fire prevention officer conduct an in-house fire safety inspection.







### Note to Installers

This warning contains vital information. As the only individual in contact with system users, it is your responsibility to bring each item in this warning to the attention of the users of this system.

### System Failures

This system has been carefully designed to be as effective as possible. There are circumstances, however, involving fire, burglary, or other types of emergencies where it may not provide protection. Any alarm system of any type may be compromised deliberately or may fail to operate as expected for a variety of reasons. Some but not all of these reasons may be:

#### Inadequate Installation

A security system must be installed properly in order to provide adequate protection. Every installation should be evaluated by a security professional to ensure that all access points and areas are covered. Locks and latches on windows and doors must be secure and operate as intended. Windows, doors, walls, ceilings and other building materials must be of sufficient strength and construction to provide the level of protection expected. A reevaluation must be done during and after any construction activity. An evaluation by the fire and/or police department is highly recommended if this service is available.

#### Criminal Knowledge

This system contains security features which were known to be effective at the time of manufacture. It is possible for persons with criminal intent to develop techniques which reduce the effectiveness of these features. It is important that a security system be reviewed periodically to ensure that its features remain effective and that it be updated or replaced if it is found that it does not provide the protection expected.

#### Access by Intruders

Intruders may enter through an unprotected access point, circumvent a sensing device, evade detection by moving through an area of insufficient coverage, disconnect a warning device, or interfere with or prevent the proper operation of the system.

#### Power Failure

Control units, intrusion detectors, smoke detectors and many other security devices require an adequate power supply for proper operation. If a device operates from batteries, it is possible for the batteries to fail. Even if the batteries have not failed, they must be charged, in good condition and installed correctly. If a device operates only by AC power, any interruption, however brief, will render that device inoperative while it does not have power. Power interruptions of any length are often accompanied by voltage fluctuations which may damage electronic equipment such as a security system. After a power interruption has occurred, immediately conduct a complete system test to ensure that the system operates as intended.

#### Nature of Replaceable Batteries

This system's wireless transmitters have been designed to provide several years of battery life under normal conditions. The expected battery life is a function of the device environment, usage and type. Ambient conditions such as high humidity, high or low temperatures, or large temperature fluctuations may reduce the expected battery life. While each transmitting device has a low battery monitor which identifies when the batteries need to be replaced, this monitor may fail to operate as expected. Regular testing and maintenance will keep the system in good operating condition.

#### Compromise of Radio Frequency (Wireless) Devices

Signals may not reach the receiver under all circumstances which could include metal objects placed on or near the radio path or deliberate jamming or other inadvertent radio signal interference.

#### System Users

A user may not be able to operate a panic or emergency switch possibly due to permanent or temporary physical disability, inability to reach the device in time, or unfamiliarity with the correct operation. It is important that all system users be trained in the correct operation of the alarm system and that they know how to respond when the system indicates an alarm.

#### Smoke Detectors

Smoke detectors that are a part of this system may not properly alert occupants of a fire for a number of reasons, some of which follow. The smoke detectors may have been improperly installed or positioned. Smoke may not be able to reach the smoke detectors, such as when the fire is in a chimney, walls or roofs, or on the other side of closed doors. Smoke detectors may not detect smoke from fires on another level of the residence or building.

Every fire is different in the amount of smoke produced and the rate of burning. Smoke detectors cannot sense all types of fires equally well. Smoke detectors may not provide timely warning of fires caused by carelessness or safety hazards such as smoking in bed, violent explosions, escaping gas, improper storage of flammable materials, overloaded electrical circuits, children playing with matches or arson.

Even if the smoke detector operates as intended, there may be circumstances when there is insufficient warning to allow all occupants to escape in time to avoid injury or death.

### Motion Detectors

Motion detectors can only detect motion within the designated areas as shown in their respective installation instructions. They cannot discriminate between intruders and intended occupants. Motion detectors do not provide volumetric area protection. They have multiple beams of detection and motion can only be detected in unobstructed areas covered by these beams. They cannot detect motion which occurs behind walls, ceilings, floor, closed doors, glass partitions, glass doors or windows. Any type of tampering whether intentional or unintentional such as masking, painting, or spraying of any material on the lenses, mirrors, windows or any other part of the detection system will impair its proper operation.

Passive infrared motion detectors operate by sensing changes in temperature. However their effectiveness can be reduced when the ambient temperature rises near or above body temperature or if there are intentional or unintentional sources of heat in or near the detection area. Some of these heat sources could be heaters, radiators, stoves, barbecues, fireplaces, sunlight, steam vents, lighting and so on.

### Warning Devices

Warning devices such as sirens, bells, horns, or strobes may not warn people or waken someone sleeping if there is an intervening wall or door. If warning devices are located on a different level of the residence or premise, then it is less likely that the occupants will be alerted or awakened. Audible warning devices may be interfered with by other noise sources such as stereos, radios, televisions, air conditioners or other appliances, or passing traffic. Audible warning devices, however loud, may not be heard by a hearing-impaired person.

### Telephone Lines

If telephone lines are used to transmit alarms, they may be out of service or busy for certain periods of time. Also an intruder may cut the telephone line or defeat its operation by more sophisticated means which may be difficult to detect.

### Sufficient Time

There may be circumstances when the system will operate as intended, yet the occupants will not be protected from the emergency due to their inability to respond to the warnings in a timely manner. If the system is monitored, the response may not occur in time to protect the occupants or their belongings.

### Component Failure

Although every effort has been made to make this system as reliable as possible, the system may fail to function as intended due to the failure of a component.

### Adequate Testing

Most problems that would prevent an alarm system from operating as intended can be found by regular testing and maintenance. The complete system should be tested weekly and immediately after a break-in, an attempted break-in, a fire, a storm, an earthquake, an accident, or any kind of construction activity inside or outside the premises. The testing should include all sensing devices, keypads, consoles, alarm indicating devices and any other operational devices that are part of the system.

### Security and Insurance

Regardless of its capabilities, an alarm system is not a substitute for property or life insurance. An alarm system also is not a substitute for property owners, renters, or other occupants to act prudently to prevent or minimize the harmful effects of an emergency situation.



